


Information is power. With accurate tidal data for 200 beaches, preprogrammed local time for 51 cities worldwide (*Typhoon World Time only*), and all the multi-functionality you've come to expect from Nike Timeware, the Typhoon World Time / Monsoon watch is designed to meet the performance demands of any open water athlete and enthusiast.

The Typhoon World Time / Monsoon is designed to be intuitively logical and easy to use. This manual contains step-by-step operational instructions to help you identify the programmable features and functions of each mode.

control functions

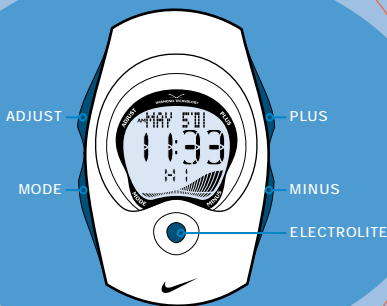

#### world time cities

Los Angeles, Denver, Chicago, New York, Montreal, Santiago, Caracas, Buenos Aires, Rio De Janeiro, Azores Islands, Greenwich, London, Lisbon, Dakar, Madrid, Paris, Lagos, Rome, Berlin, Vienna, Stockholm, Athens, Johannesburg, Cairo, Jerusalem, Nairobi, Moscow, Jeddah, Riyadh, Tehran, Dubai, Kabul, Karachi, Delhi, Dhaka, Yangon, Bangkok, Jakarta, Singapore, Hong Kong, Perth, Beijing, Tokyo, Adelaide, Sydney, Noumea, Wellington, Honolulu, Anchorage and Vancouver.

world time

This is the first programmable mode of the Typhoon World Time. There are 51 cities worldwide to choose from for two time modes, Home and Away. Once your Home time has been adjusted, all other time zones will adjust accordingly. (*not available on Monsoon*)

#### SELECT WORLD TIME CITY

- 1- in **TIME** mode, hold **ADJUST** for 3 sec. name of city will appear.
- 2- use the **PLUS** and **MINUS** to scroll selections and select city.
- 3- press **MODE** to continue to **TIME** adjustment.



*Note that the adjustable element is always blinking. If no buttons are pressed for 2-3 minutes, the watch will exit **ADJUST** and return to **TIME** mode.*

time / calendar

#### SET TIME AND CALENDAR

- 1- in **TIME** mode, press and hold **ADJUST** for 3 seconds. Name of **HOME** city will appear.
- 2- press **MODE** to select Daylight Savings Time.
- 3- use **PLUS** or **MINUS** to turn D.S.T. on or off, and to change adjustable elements.
- 4- press **MODE** to continue to seconds, minutes, hour, day, month, year, 12 or 24-hour display, day of the week, and display contrast level.
- 5- press **ADJUST** to save changes.



#### SET AWAY CITY

- 1- in **TIME** mode, press and hold **MINUS** for 3 seconds. Display will switch to **AWAY** time.
- 2- follow the previous instructions to select **AWAY** city. Once **HOME** time has been set, **AWAY** time will adjust accordingly.

Your Typhoon World Time / Monsoon comes preprogrammed with tidal data for 200 beaches worldwide.

#### READING THE GRAPHIC DISPLAY

The Typhoon World Time / Monsoon graphic display for **SURF** is similar to those typically found in published tide charts. The darkened portion of the display represents the water level. The tide progression is from left to right.

ctions

- 2 - use the PLUS and MINUS to scroll selections and select city.
- 3 - press MODE to continue to TIME adjustment.

Note that the adjustable element is always blinking. If no buttons are pressed for 2-3 minutes, the watch will exit ADJUST and return to TIME mode.

time / calendar

#### SET TIME AND CALENDAR

- 1 - in TIME mode, press and hold ADJUST for 3 seconds. Name of HOME city will appear.
- 2 - press MODE to select Daylight Savings Time.
- 3 - use PLUS or MINUS to turn D.S.T. on or off, and to change adjustable elements.
- 4 - press MODE to continue to seconds, minutes, hour, day, month, year, 12 or 24-hour display, day of the week, and display contrast level.
- 5 - press ADJUST to save changes.



#### SET AWAY CITY

- 1 - in TIME mode, press and hold MINUS for 3 seconds. Display will switch to AWAY time.
- 2 - follow the previous instructions to select AWAY city. Once HOME time has been set, AWAY time will adjust accordingly.

surf functions

Your Typhoon World Time / Monsoon comes preprogrammed with tidal data for 200 beaches worldwide.

#### READING THE GRAPHIC DISPLAY

The Typhoon World Time / Monsoon graphic display for SURF is similar to those typically found in published tide charts. The darkened portion of the display represents the water level. The tide progression is from left to right.

In SURF mode, the auto-scrolling tidal data will show the time for all LOW and HIGH tides of the selected day. An example of the LOW and HIGH tide graphics appear below.



surf

Select from among 200 preprogrammed beaches worldwide for auto-scrolling tidal data.

#### TO SET BEACH

- 1 - press MODE to select SURF. Press and hold ADJUST for 3 seconds to select REGION.
- 2 - press PLUS or MINUS to view various regions around the world.
- 3 - then press MODE to view BEACHES within selected region. Press PLUS or MINUS to select beach. Press ADJUST to save.



#### TO CHECK DAILY TIDES

While in SURF mode, press PLUS to check tides for future days, MINUS to check previous days.

heat timer

Also known as a "Yacht" or "Race" timer, this function is used to count down from any preset interval to zero.

#### TO SET HEAT

- 1 - press MODE to select HEAT. Heat 1 will appear.
- 2 - press and hold ADJUST for 3 seconds.
- 3 - press MODE to select adjustable element.
- 4 - press PLUS or MINUS to adjust secs, mins and hours.
- 5 - press ADJUST to save changes.



#### START HEAT TIMER COUNTDOWN

- 1 - press PLUS to begin. Countdown tones begin at 3 secs. At zero, an alarm will sound.
- 2 - press MINUS to pause countdown.
- 3 - press PLUS to resume countdown.

#### ADDITIONAL HEATS (up to 5 total)

- 1 - in HEAT mode, press MINUS to select HEAT 2. Continue pressing for heats 3-5.
- 2 - to set, follow instructions for Heat 1



## chronograph

Monitor elapsed time in 1/100th of a second increments.

### MEASURE ELAPSED TIME

- 1 - press MODE to select CHRO.
- 2 - press PLUS to start measuring elapsed time.
- 3 - press MINUS to stop measuring elapsed time. Total elapsed time is displayed.
- 4 - press ADJUST to reset time to zero.



## alarm

There are 2 alarms programmable to ring in either of two time zones, Home and Away.

### SET ALARM

- 1 - press MODE to select ALRM. Alarm 1 becomes visible.
- 2 - press and hold ADJUST for 3 seconds.
- 3 - press MODE to select adjustable element between hours and minutes.
- 4 - press PLUS or MINUS to increase or decrease the adjustable element.
- 5 - press ADJUST to save.

To select between Alarm 1 and Alarm 2, go to ALRM mode and press MINUS.

### TURN ALARM ON/OFF

While in ALARM 1 or ALARM 2 mode, press PLUS to activate or deactivate alarm. Display alternates between "on" and "--" (off).

To deactivate a sounding alarm, press any button.



## specifications

### MODE LIMITS

chronograph  
9:59'59"99

timer  
9:59'59"

### BATTERY

type of battery  
WG52A  
battery life  
approx. 1.5 years

### WATCH MATERIALS

crystal  
mineral glass  
casing  
plastic resin  
caseback  
stainless-steel  
strap  
urethane  
buckle  
stainless-steel

### WATER RESISTANCE

100 meters

*When display flashes continuously in TIME mode, it is time to replace the battery.*

## acknowledgments

Special thanks to the following organizations for permitting the use of tidal data essential to the workings of the Typhoon World Time / Monsoon watch:

- Canadian Hydrographic Service
- The International Hydrographic Organization
- Istituto Idrografico della Marina of Italy
- The Maritime Safety Agency of Japan (Permission No. 100020)
- Hydrographic Office of the Royal New Zealand Navy

*Neither they nor their affiliates may be held liable in any way for the accuracy of this product.*

## DISCLAIMER

This watch provides tidal predictions that are not guaranteed to be accurate. Many factors, which are not accounted for by this watch, including weather conditions, can dramatically affect tidal ranges and current speeds. The responsibility for computing and tabulating, for any day in the year, the times, heights and ranges of tides, as well as the movement of tidal currents, is vested in government agencies.

**UNDER NO CONDITIONS SHOULD THIS WATCH BE USED FOR NAVIGATIONAL PURPOSES. ALWAYS CHECK THIS WATCH'S TIDE PREDICTIONS AGAINST OFFICIALLY SANCTIONED TABLES! DO NOT RELY UPON THIS WATCH AS THE BASIS FOR ANY DECISION – SEVERE BODILY INJURY, INCLUDING DEATH AND PROPERTY DAMAGE, MAY RESULT!**

## ONE YEAR LIMITED WARRANTY

Your Nike watch is warranted to be free of defects in materials or workmanship, under normal use, for a period of one year from the date of original retail purchase. This limited warranty excludes the battery, crystal, strap, or damage resulting from improper care or handling, accidents, modification, unauthorized repairs, or normal wear.

Return the defective watch and the store receipt to the place of purchase. If there is a covered defect, the defective part or watch will be repaired or replaced, at Nike's option, with the same product (if available) or a similar product of equal price.

Neither they nor their affiliates may  
be held liable in any way for the  
accuracy of this product.

#### DISCLAIMER

This watch provides tidal predictions that are not guaranteed to be accurate. Many factors, which are not accounted for by this watch, including weather conditions, can dramatically affect tidal ranges and current speeds. The responsibility for computing and tabulating, for any day in the year, the times, heights and ranges of tides, as well as the movement of tidal currents, is vested in government agencies.

**UNDER NO CONDITIONS SHOULD THIS WATCH BE USED FOR NAVIGATIONAL PURPOSES. ALWAYS CHECK THIS WATCH'S TIDE PREDICTIONS AGAINST OFFICIALLY SANCTIONED TABLES! DO NOT RELY UPON THIS WATCH AS THE BASIS FOR ANY DECISION - SEVERE BODILY INJURY, INCLUDING DEATH AND PROPERTY DAMAGE, MAY RESULT!**

#### ONE YEAR LIMITED WARRANTY

Your Nike watch is warranted to be free of defects in materials or workmanship, under normal use, for a period of one year from the date of original retail purchase. This limited warranty excludes the battery, crystal, strap, or damage resulting from improper care or handling, accidents, modification, unauthorized repairs, or normal wear.

Return the defective watch and the store receipt to the place of purchase. If there is a covered defect, the defective parts or watch will be repaired or replaced, at Nike's option, with the same product (if available) or a similar product of equal price.

This limited warranty is in lieu of all other express or implied warranties, and excludes refund of the purchase price. In no event shall Nike be liable for direct, indirect, incidental or consequential damages arising out of the use of the watch, and any recovery is limited to the purchase price. No other person or company is authorized to change this warranty, and your dealer is solely responsible for any other warranties.

Your Nike watch is a precision sport time piece, sealed at the factory for water-resistance. In order to maintain your watch's warranty, functionality and water-resistance, all service including battery replacement must be performed at an authorized service center.

If your Nike watch has a translucent colored strap, the strap's color and translucence may fade over time due to exposure to UV radiation, your skin's pH factor, sweat and strong dyes in clothing. Any such discoloration and fading is not covered by the warranty.

#### REPAIR CENTERS

<b>Finland</b> 0800-113 198	<b>Norway</b> 800-11 375
<b>France</b> 0800- 903 186	<b>Portugal</b> 05-05 31 33 66
<b>Germany</b> 0130-81 04 33	<b>Singapore</b> 65-788 0990
<b>Hong Kong</b> 852 2751 4988	<b>South Africa</b> 0800 11 64 77
<b>Italy</b> 800-79 03 16	<b>Spain</b> 900-98 31 74
<b>Ireland</b> 1-800 55 31 48	<b>Sweden</b> 020-79 81 57
<b>Japan</b> 0120-500-719	<b>Switzerland</b> 0800-55 58 21
<b>Luxembourg</b> 0800 2618	<b>UK</b> 0800-89 36 77
<b>Mexico</b> 5329- 40000	<b>USA</b> 800-359-2508
<b>Netherlands</b> 0800-15 92	Parsec Enterprises, Inc. 7501 N. Harker Dr. Peoria, IL 61650 www.parsecent.com

Please fill out this registration card and retain  
as proof of warranty.

OWNER'S NAME

DATE OF PURCHASE

RETAILER (if known)

NAME/STYLE OF WATCH

SERIAL NUMBER (located on back of watch)

SIGNATURE



typhoon world time  
monsoon

INSTRUCTION MANUAL

